



Montessori Toy Storage Assembly

1.



Insert 2 metal and 1 wooden screw in to the grooves in 1 line (wooden screw in the centre)

2.




Repeat this step 6 times as shown in the image.

3.



Now insert the slabs into the sides (bolt holes facing downwards)

4 .

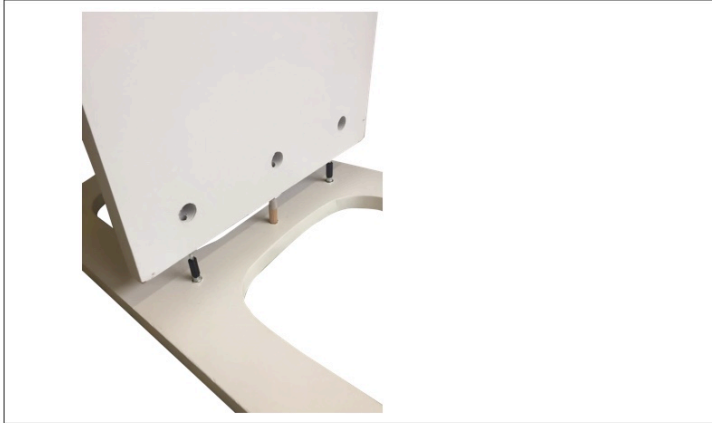

Now insert the slabs into the other side too.

5 .



Make sure all screws are completely inserted and tight.

6 .



Insert a bolt into the big circular groove and tighten with a screwdriver by turning it around only 1 full circle. Repeat this 8 times for the 12 circular grooves. Your shelf is ready.