



Sweet Home Toy Storage Assembly


1.



Insert 4 locking pins into each of the 4 long (~ 40 inches) brown wooden side sticks. You don't need a screw driver for this step.



2.

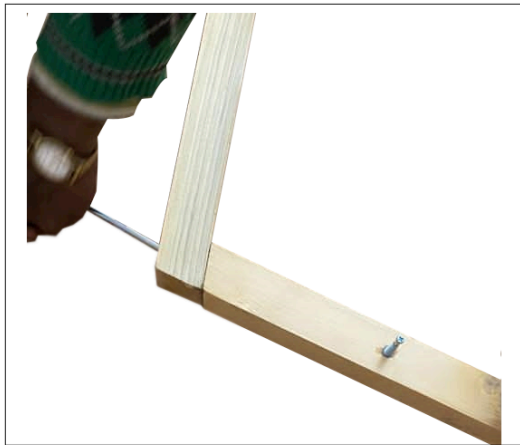


Screw in the top slanting sticks (1 long and 1 short) using the screws and a screw driver to the side sticks.




Leg caps of the side sticks should face downwards.

Repeat this step for both sides.

The top frame should look like this when locking pins of both sides are pointing inwards.

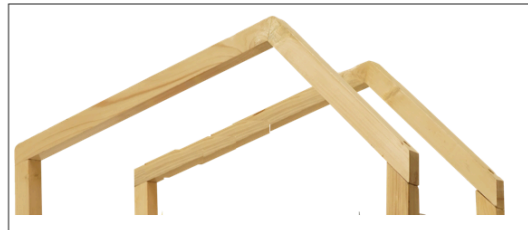


3.

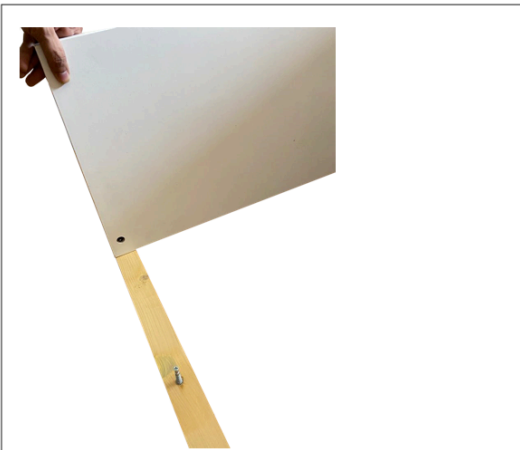

The outer framework is now ready. Start inserting white wooden slabs into the screws inserted in step 1. The slabs should be inserted such that the side with holes faces downwards.

4 .

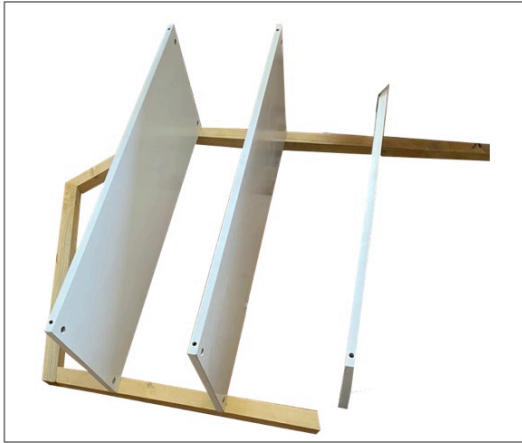

Insert all 4 slabs into the screws and make sure they go all the way through.

5 .




Now fix the second brown side into the slabs and push it in.
The structure is almost ready now.

6 .



Once everything is in place, insert 4 locking nuts in each of the 4 white slab holes. They need to go around just 1 full circle and you will need a screw driver for this.
This keeps the locking pins in place and holds the structure tight.

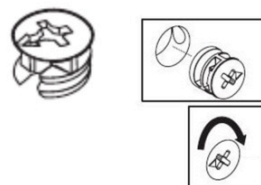

Fixing to wall:

It would be useful to ask a professional to help you to attach the unit to the wall using Anti tip kit provided. When drilling into walls, always check that there are no hidden wires or pipes etc (Masonry walls only).